

KODLISTA/KOODILUETTELO

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi				
ACCENT	0301	2551	2791		
ACCUPHASE	2791				
ACEC	2741				
ACTION	0051	0301	2391		
ADCOM	2711				
ADMIRAL	0051	0301	0721	0981	1131 1571
	2571				
ADYSON	0051	2391			
AEA	2551	2791			
AGEF	2571				
AIKO	0301	2551	2751	2791	
AIM	2551	2791			
AKAI	0051	0301	0671	0741	0851 0871
	0991	1001	1491	2371	2391 2551
	2751	2791			
AKIBA	2551	2791			
AKITO	2551	2791			
AKURA	0051	0301	0881	0891	2551 2791
ALBA	0051	0301	1571	1681	2541 2551
	2791				
ALBIRAL	1691				
ALFA	0051				
ALLORGAN	1901				
ALLSTAR	0051	2551	2791		
AMSTRAD	0301	0981	1781	2381	2551 2791
ANAM	2551	2791			
ANAM NATIONAL	2551	2791			
ANGLO	0301				
ANITECH	0051	0301	1111	2391	2551 2581
	2791				
ANSONIC	0301	2551	2581	2631	2741 2791
AOC	0051	2391			
AR SYSTEM	1741	2551	2791		
ARCAM	2641				
ARC EN CIEL	1991	2341	2591	2641	2681
ARDEM	2551	2791			
ARISTONA	0051	2471	2551	2741	2791
ART TECH	0051				
ARTHUR-MARTIN	0771				
ASA	1101	1371	1381	1471	2571
ASBERG	0051	1111	1571	2551	2581 2791
ASORA	0301				
ASTRA	0301	2551	2791		
ATLANTIC	0051	1901	2551	2791	
ATORI	0301				
ATORO	0301				
AUCHAN	0771				
AUDIOSONIC	0051	0301	2551	2591	2631 2791
AUDIOTON	0301				
AUDIOVOX	0051				
AUTOVOX	1891	1901	2481	2571	2771
AWA	0111	0301	2531	2541	2551 2631
	2791				
BAIRD	2591	2621	2801		
BANG & OLUFSEN	2281	2571			
BASIC LINE	0051	0061	0301	2551	2631 2791
BAUR	0051	0181	0301	0411	0421 0431
	0441	0471	0791	1281	1291 1301
	2551	2691	2721	2751	2771 2781
	2791				
BEC	0051				
BECRESE	0051	2391			
BEKO	0051	1361	1621	1651	2021 2551
	2791				
BELL & HOWELL	0051				
BENCHMARK-BEAUMARK	0051	0301	2391		
BEON	0051	1571	2551	2791	
BESTAR	0051	0801	2551	2631	2791
BESTAR-DAEWOO	2631				
BIGSTON	0301				
BLACK DIAMOND	2791				
BLACK PANTHER	2581				

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi				
BLAUPUNKT	1231	1241	1251	1271	1281 1301
	1321	1341	2371	2441	2451 2751
	2781				
BLAUPUNLET	0051	2551	2791		
BLUE SKY	2481				
BONDSTEC	2441				
BOSCH	2551	2791			
BPL	1991	2591	2601	2611	2621 2641
BRANDT	2661	2681	2711		
BRANDT ELECTRONIQUE	1801	1851	1991	2341	2601 2611
	2681				
BRENDSTAR	0301				
BRINKMANN	1571	2551	2791		
BRIONVEGA	0051	0981	2551	2571	2791
BRIORRYEGA	0051				
BROCKWOOD	2391				
BROKSONIC	2391				
BRUNS	2571				
BSR	0621	0751			
BUSH	0051	0621	0871	1681	2541 2551
	2631	2771	2791		
	2391				
CAMPLE	2391				
CANDLE	0051	2391			
CAPEHART	2551	2791			
CARAD	2551	2791			
CARENA	0051	2541	2551	2791	
CARREFOUR	0051				
CARVER	2551	2791			
CASCADE	2551	2791			
CASIO	2551	2771	2791		
CATHAY	0051	2551	2791		
CCE	2551	2791			
CENTURION	0051	2551	2791		
CENTURY	2201	2571	2761		
CGE	0301	0691	0871	1111	1571 2201
	2461	2641			
CGM	0301				
CIE	0301				
CIMLINE	0301				
CIRCUIT CITY	2391				
CITIZEN	0051	2391			
CITY	0301				
CLARIVOX	1601	2171	2551	2581	2791
CLATRONIC	0301	1111	1181	2191	2201 2551
	2581	2791			
COLORTYME	0051				
COMPUTRON	0301				
CONCORDE	0301				
CONDOR	0051	0301	1181	1571	2551 2581
	2791				
CONIC	0051	2391			
CONRAD	2551	2791			
CONTEC	0301	2531	2541	2551	2791
CONTINENTAL EDISON	0331	1801	1991	2341	2601 2641
	2681				
CORONADO	2391				
COSMEL	0301	2551	2791		
CRAIG	0051				
CROSLEY	0051	0701	1111	2201	2571
CROWN	0051	0301	1111	2391	2551 2791
CRYSTAL	0051				
CTC CLATRONIC	1571				
CURTIS MATHES	0051	2391			
DAEWOO	0051	0271	0281	0291	0301 1751
2391					
	2551	2631	2791		
DAICHI	0301				
DANSAI	2391	2541	2551	2791	
DAWA	0051	2551	2791		
DAYTRON	0301	2391	2551	2631	2791
DECCA	0051	1581	2144	2271	2551 2791
DEITRON	2551	2631	2791		
DENVER	0301	2551	2791		
DER	2801				
DESMET	0051	0301	2551	2571	2791

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi				
DIAMANT	2551	2791			
DIAMOND	0301				
DIGILINE	2551	2791			
DIGITOR	2551	2791			
DIK	2551	2791			
DIXI	0051	0301	2551	2571	2791
DORIC	2771				
DTS	0301				
DUAL	0051	0301	0981	1161	2491 2551
	2621	2641	2771	2791	
DUMONT	1571	2301	2571	2581	
DUX	2551	2741	2791		
D-VISION	2551	2791			
DYNAMIC	0301				
DYNATECH	2391				
DYNATRON	2551	2741	2791		
EDISON	2591				
ELBE	0711	0981	1151	2171	2551 2751
	2761	2791			
ELBIT	0051				
ELCIT	2571	2581			
ELECS	0051				
ELECTRATUNE	2391				
ELECTRO TECH	0301				
ELECTROHOME	2391				
ELECTRONIKA	0051				
ELEKTA	0301	2551	2791		
ELG	2551	2791			
ELIN	0051	0301	2551	2771	2791
ELITE	0051	2391	2551	2791	
ELMAN	2021	2581			
ELTA	0301	0801			
EMERSON	2391	2551	2571	2791	
ERRES	0051	2471	2551	2741	2791
ESC	2551	2791			
ETRON	0301	0861	2551	2791	
EUROMAN	2551	2791			
EUROMANN	0051				
EUROPA	2551	2791			
EUROPHON	0051	2151	2551	2581	2791
EXCEL	2551	2791			
EXPERT	0771	1901	2011		
EXPERT (F)	0771	2011			
EXQUISIT	2551	2791			
FAMILY LIFE	2551	2791			
FENNER	0301	2631			
FERGUSON	1591	1841	1851	1921	1931 1941
	1951	2021	2061	2131	2171 2551
	2591	2601	2611	2621	2661 2701
	2711	2761	2791	2801	
FIDELIS	0301				
FIDELITY	0841	2551	2791	2801	
FILSAI	0301				
FINLANDIA	1051	1471	2601	2621	
FINLUX	0051	0301	0621	1081	1101 1371
	1381	1441	1451	1461	1471 1501
	1521	1531	1571	1821	2141 2551
	2571	2581	2791		
FIRST LINE	0051	0301	2551	2581	2631 2761
	2771	2791			
FISHER	0261	2221	2311	2541	2571 2771
FLINT	0051	2551	2791		
FNR	2581				
FORGESTONE	2801				
FORMENTI	0051	0821	2551	2571	2791
FORTRESS	2391	2571			
FRABA	2551	2791			
FRAC	2351	2581	2791		
FRONTECH	0301	2401	2771		
FUBA	1641				
FUJITSU	0751	1901	2391	2551	2581 2791
FUJITSU GENERAL	0751	0981	1901		
FUNAI	0301	2391			
FUTURE	2551	2791			
GALAXI	2551	2581	2791		

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi				
GALAXIS	1181	1571	2551	2581	2791
GALAXY	1181	1571			
GALERIA	0301				
GBC	0301	0701	0721	2161	2631
GE	2591	2601	2611	2621	2701
GEANT CASIONO	0771				
GEC	0661	2551	2561	2771	2791
GELOSO	0301	2201	2631		
GEMSOUND	0301				
GENERAL	0301	2591	2601	2661	
GENERAL ELECTRIC	2601	2621			
GENERAL TECHNIC	0301				
GENEXXA	0051	2551	2791		
GM	0301				
GMG	0301	1571			
GOLDHAND	0301				
GOLDSTAR	0051	0301	0621	1131	1241 1631
	2391	2481	2551	2591	2791
GOODMANS	0051	0301	1681	1951	2321 2541
	2551	2611	2621	2631	2701 2791
GPM	0301				
GRADIENTE	2551	2791			
GRADIN	0051	0301			
GRAETZ	0661	0731	0861	1051	2551 2791
GRANADA	0051	0361	0641	0931	0951 1511
	1951	2411	2541	2551	2611 2621
	2701	2741	2791		
GRAND	0771	2011	2551	2631	2791
GRANADIER	0301				
GRONIC	2581				
GRUNDIG	0331	1211	1221	1231	1241 1251
	1261	1271	1281	1301	1311 1321
	1331	1341	1351	2541	2551 2571
	2781	2791			
GTT	0301	1571			
HALLMARK	2391				
HALSEATIC	0051	0301	1161	2551	2571 2771
	2791				
HANTAREX	0051	0301	2161	2551	2581 2791
HANTOR	2551	2791			
HARLEY DAVIDSON	2391	2561			
HARRAD	2391				
HARVARD	2391				
HARWOOD	2551	2791			
HAUPPAUGE	2551	2791			
HCM	0301	2551	2791		
HEATHKIT	0051				
HEDZON	2551	2791			
HEMMERMANN	2771				
HIFIFOX	1991	2341	2591	2641	2681
HIGHLINE	2551	2791			
HILINE	0301				
HINARI	0051	0301	0861	2321	2541 2551
	2791				
HIT	2571				
HITACHI	0051	0631	0661	0671	0781 0791
	0921	0991	1051	1501	1791 1991
	2391	2521	2541	2551	2561 2591
	2621	2771	2791		
	2671				
HMV	0051				
HORIZONT	0051				
HORNYPHON	2551	2741	2791		
HORNYPHONE	2631				
HUANYU	1571				
HUSPI ELEKTRONIK	0301	2481			
HYPER	0051	0301	2551	2761	2791
HYPSON	2551	2791			
IBERIA	0051	0301	2551	2791	
ICE	0051	2791			
ICOS	2741				
ICT	2551	2791			
IMA	2391				
IMPERIAL	0051	0611	0691	0871	1111 1181
	1571	2201	2551	2771	2791
INDIANA	0051	2551	2791		

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi					
INFINITY	0051					
INGELEN	1621					
INGERSOLL	0301					
INNO HIT	0051	0301	1131	2151	2551	2581
	2791					
INNOHIT	0051	0301	1131			
INNOVATION	2551	2791				
INTERACTIVE	2551	2571	2591	2681	2741	2791
INTERBUY	0301	2551	2791			
INTERDISCOUNT	0051					
INTERFUNK	0051	0661	0741	0861	0901	1181
	1571	2231	2241	2441	2451	2471
	2551	2571	2591	2681	2741	2771
	2791					
INTERNAL	2551	2631	2791			
INTERVISION	0801	2551	2581	2791		
IRRADIO	0051	0301	1081	1131	2481	2551
	2791					
IST	0051					
ISUKAI	0051	2551	2791			
ITL	0301					
ITS	0301	2551	2791			
ITT	0721	0911	2771	2801	1601	1741
	1921	1981	2171			
ITT NOKIA	2771					
ITV	2551	2631	2791			
JBL	0051					
JEAN	2541					
JETPOINT	0051					
JINLIPU	0301					
JMB	2551	2631	2791			
JOCEL	0081	0091	0211	0221	0231	0341
JULIBEE	2791					
JUMBOTRONIC	0051					
JVC	0051	0491	0501	0511	0521	0531
	0541	0551	2541	2801		
KAISER	0051					
Kaisii	0051	0301	2551	2791		
KAPSCH	0681	1901				
KARCHER	0051	0301	2551	2581	2791	
KATHREIN	2551	2791				
KENDO	0051	0301	0711	0981	1901	2551
	2581	2791				
KENNEDY	0981	1901				
KENWOOD	2391					
KIOTA	0301					
KITTON	2791					
KLH	2391					
KNEISSEL	1161	2551	2631	2761	2791	
KOBIC	0301					
KOLSTER	0051	2551	2581	2771	2791	
KONICHI	0301					
KÖNIG	1981					
KONKA	2551	2791				
KORPEL	0051	2551	2791			
KÖRTING	2211	2241	2571			
KÖRTING	2211	2241				
KOSMOS	2551	2791				
KRAKING	2761					
KRIESLER	2741					
KTV	2391					
KUASHO	0051	2391				
KUBA	2771					
KUBA ELECTRONIC	2771					
LEADER	0301					
LECSOON	2551	2791				
LEGEND	0301					
LENCO	0051	0301	0321	2551	2631	2791
LENOIR	0301					
LEVIS AUSTRIA	2551	2791				
LEYCO	0051	2551	2791			
LG	2551	2591	2791			
LIESENK & TTER	2551	2791				
LIESENKÖTTER	0051	2551	2741	2791		
LIESENKÖTTER	0051	2441				

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi					
LIFE	0301					
LIFETEC	0301	2551	2631	2791		
LINITRON	2391					
LLOYD	2391					
LLOYD'S	0301					
LOEWE	0051	2251	2551	2571	2791	
LOGIK	2531	2551	2791	2801		
LOGIK	0251	2351				
LUMA	0051	0301	0721	0981	1901	2551
	2631	2791				
LUMATRON	2551	2791				
LUX MAY	0051	2551	2791			
LUXOR	0631	0671	0741	0781	0791	0811
	0901	0991	1001	1021	1031	1041
	1051	1131	1371	1441	1471	1501
	1521	2771				
LUXOR SALORA	2001					
LUXOR/SKANTIC	0991					
LXI	0051					
M ELECTRONIC	0301	1501				
M ELECTRONICS	0051	0301	1471	2021		
MACYS	2391					
MADISON	2551	2791				
MAGNADYNE	0051	0301	0701	1571	2151	2191
	2201	2571	2581			
MAGNAFON	2151	2581				
MAGNASONIC	0051	0301	2391			
MAGNAVOX	0051	2641	2551	2791		
MAGNUM	0171	2551	2791			
MANESTH	0051	2551	2791			
MANHATTAN	2551	2791				
MARANTZ	0051	2551	2791			
MARELLI	2571					
MARK	0051	2551	2631	2791		
MASUDA	2551	2791				
MATSUI	0051	0301	0311	0331	0611	1241
	1731	2531	2541	2551	2611	2751
	2771	2791				
MAVA	2391					
MAXAM	0301					
MAXELL	0301					
MCE	0301					
MCMICHAEL	2561					
MEDIATOR	0051	2471	2551	2741	2791	
MEDION	0651	2351	2361	2371	2381	2391
MELETRONIC	1411	1541	2551	2591	2601	2621
	2631	2751	2771	2791		
	0301					
MEMOREX	0301					
MEMPHIS	0301	2551	2791			
MERCURY	1191	1201	1241	1281	1301	1331
METZ	2231	2261	2551	2571	2751	2781
	2791					
MGA	2551	2791				
MICROMAXX	2551	2791				
MIDLAND	2391					
MINATO	2551	2791				
MINERVA	1241	1301	2751	2781		
MINOKA	0051	2551	2791			
MISTRAL ELECTRONIC	2801					
MITSUBISHI	0051	0301	2301	2311	2411	2421
	2511	2541	2551	2571	2791	2801
MIVAR	1091	1121	1131	1151	1161	1611
	2161	2181				
MORGAN'S	2551	2791				
MOTOROLA	0051					
MTC	2391	2771				
MULTIBROADCAST	2801					
MULTISTANDARD	2581					
MULTITEC	2551	2791				
MULTITECH	0051	0301	1111	2391	2551	2581
	2771	2791				
MUSIKLAND	2551	2791				
MYRYAD	2551	2791				
NAIKO	2551	2791				

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi				
NAKIMURA	2551	2631	2791		
NAMSUNC	0301				
NAONIS	0721				
NATIONAL	0051	0351			
NEC	0301	2531	2541	2551	2631 2791
NECKERMANN	0051	0301	0431	0441	0501 0791
	0921	0981	1181	1241	1261 1281
	1301	1331	2151	2441	2451 2551
	2571	2691	2721	2751	2771 2781
	2791				
NEI	0051	1721	2551	2791	
NETSAT	2551	2791			
NEUFUNK	2551	2791			
NEUWTECH	0051	0301	2551	2621	2791
NIKKAI	0051	2391	2541	2551	2791
NIKKO	1711				
NOBLEX	0261	0301			
NOBLIKO	1081	1111	2581		
NOGAMATIC	1991	2341	2591	2641	2681
NOKIA	0241	0301	0631	0661	0671 0721
	0731	0741	0811	0831	0861 0901
	0931	0991	1001	1041	1051 1391
	1401	1421	1431	1481	1501 1511
	1521	1541	1571	1821	2591 2631
	2771				
NOKIA AKAI	0851				
NONAME	0051				
NORDMENDE	1791	1811	1851	1861	1871 1921
	1961	1991	2021	2051	2341 2551
	2591	2601	2611	2621	2641 2661
	2681	2701	2791		
NORMEREL	2551	2791			
NOVABEAM	0051				
NOVAK	2741				
NOVATRONIC	0051	0301	2551	2631	2791
O GENERAL	0301				
OCEANIC	0771	0811	0991	1051	1501 1521
	2011				
OKANO	0301	2551	2791		
OLYMPIC	0301				
ONCEAS	0301				
ONWA	2581				
OPERA	0051	2551	2791		
ORBIT	0051	2551	2791		
ORIENT	0301				
ORION	0051	0121	0131	0141	0151 0301
	0961	0971	2111	2391	2531 2551
	2581	2791			
ORLINE	2551	2791			
ORMOND	2551	2791			
OSAKI	2551	2631	2791		
OSIO	2551	2791			
OSUME	2541	2551	2791		
OTF	0301				
OTTO VERSAND	0051	0301	0411	0421	0431 0441
	0451	0621	0791	0801	1261 1271
	1281	1331	2021	2371	2481 2491
	2541	2551	2591	2621	2691 2721
	2751	2771	2781	2791	
OTTO-VERSAND	0051	0301	0441	0471	0561 0801
	1241	1261	1301	1631	2021 2111
	2371				
PACIFIC	0091	0101	2551	2791	
PAEL	1081				
PALLADIUM	0051	1281	2551	2571	2691 2721
	2751	2771	2781	2791	
PALSONIC	2551	2791			
PANAMA	0301	2551	2791		
PANASHIBA	0301				
PANASONIC	0051	0351	0361	0371	0381 0391
	1191	2361	2371	2551	2791
PANAVISION	2551	2791			
PANAVOX	0301				
PANORAMA	0301				
PATHE CINEMA	1161	2761	2771		

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi				
PATHE MARCONI	1991	2341	2591	2641	2681
PAUSA	0301				
PCE/PEC	2391				
PENNEY	2391				
PERDIO	2551	2791			
PERFEKT	0051	2551	2791		
PHILCO	0051	0301	0691	0701	1111 1181
	1571				
	2201	2551	2571	2791	
PHILEX	2801				
PHILIPS	2551	2561	2571	2621	2631 2651
	2741	2751	2761	2781	2791 2801
	2811				
PHILIPS (F)	0051	2471			
PHOENIX	0051	2541	2571	2791	
PHONOLA	0051	2471	2551	2571	2741 2791
	2801				
PILOT	2551	2791			
PIONEER	0051	0761	1791	2551	2591 2601
	2621	2651	2791		
PLANTRON	0051	0301	2551	2791	
POLICOM	2571	2581	2591	2681	2761
POPPY	0301				
PORTLAND	2391	2631			
PRANDONI-PRINCE	0721	1081			
PRANDONI-PRINCE	2151				
PRIMA	0051	0301	2391		
PRINCESS	0301				
PRINZ	2771				
PROELCO	0051				
PROFEX	0301	0801	1111		
PROFITRONIC	0051	2551	2581	2791	
PROLINE	2551	2711	2741	2791	
PROSONIC	2551	2631	2791		
PROTEC	0051	0301			
PROTECH	2551	2581	2771		
PROTECT	2791				
PROTON	0301	2391			
PROVISION	2551	2791			
PULSER	0051	0301	2391		
PYE	0051	2551	2571	2631	2741 2771
	2781	2791			
PYMI	0301				
QUELLE	0051	0301	0411	0421	0431 0441
	0451	0471	0501	0621	0871 0981
	0991	1081	1101	1131	1241 1271
	1281	1301	1331	1371	1381 1451
	1471	1521	1661	1671	1901 2311
	2371	2391	2441	2451	2461 2481
	2531	2541	2551	2591	2681 2691
	2721	2751	2771	2781	2791
QUESTA	2541				
R LINE	0051	2551	2791		
RADIALVA	2551	2591	2601	2791	
RADIO SHACK	2391	2551	2791		
RADIOLA	0051	2471	2551	2741	2791
RADIOMARELLI	2151	2551	2571	2791	
RADIOSTONE	2791				
RADIOTONE	0051	0301	2551		
RANK ARENA	2541				
RANK/BUSH/MURPHY	1141				
RCA	2611	2621	2701	2711	
RECOR	2551	2791			
RECORD	0051				
RECTILIGNE	2551	2791			
REDIFFUSION	2541				
REDSTAR	2551	2791			
REFLEX	2551	2791			
REGENTE	0301				
REVOX	0051	2551	2791		
REVOX/STUDER	0051				
REX	0711	0751	0981	1161	1901 2201
RFT	1161	1171	2551	2571	2791
RICOB	2551	2791			
RMB	2391				

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi					
ROADSTAR	0301	2551	2791			
ROBOTRON	2571					
RODEX	2551	2791				
ROSITA	0301					
ROWA	0301					
ROYAL	0301					
ROYAL LUX	2611					
RUKOPIIR	2551					
SABA	0861	0861	1061	1791	1801	1811
	1851	1991	2021	2031	2041	2151
	2331	2341	2571	2591	2601	2611
	2621	2641	2661	2681	2701	2711
	2761					
SACCS	0051	2531				
SAISHO	2551	2791				
SAIVOD	0301					
SAKURA	0631	0641	0741	0791	0811	0921
SALORA	0991	1001	1041	1051	1131	1391
	1471	1491	1501	1521	1541	1821
	2771					
SALSA	2611					
SAMBERS	1081	1111	1131	2151	2581	
SAMPO	2391					
SAMSUNG	0051	0161	0181	0261	0301	1131
	1661	2391	2401	2551	2791	
SAMSUX	2391					
SANELA	2761					
SANKY	2391					
SANSUI	0051	0301	2391	2551	2791	
SANYO	0301	1161	1671	2311	2531	2541
	2551	2791				
SAVE	2551	2791				
SBR	0051	2471	2551	2561	2741	2791
	2801					
SCHAUB LORENZ	0991	1051	2631	2771		
SCHNEIDER	0051	0161	0171	0301	0861	0941
	0981	1161	2471	2481	2491	2551
	2621	2741	2771	2791		
SCHNEIDER (F)	2471					
SCOTT	2391					
SEG	0301	0471	1111	2391	2541	2551
	2581	2771	2791			
SEI	2551	2571	2581	2691	2721	2771
	2791					
SEI-SINUDYNE	0051	0701	2551	2571	2581	2691
	2721	2791				
SELECO	0681	0711	0721	0751	0981	1011
	1161	0681	1761	1881	1891	1901
	2001	2311	2541			
SEMUA	2391					
SENCORA	0301					
SENTRA	0861	2771				
SHARP	0561	0571	0581	0591	0601	2311
	2391	2541	2801			
SHINTOSHI	2551	2791				
SHIVAKI	0051	2551	2631	2791		
SHOW	0301					
SIAREM	0701	2161	2571	2581		
SICATEL	1181	1551				
SICATEL-FRANCE-S	1551					
SIEMENS	0051	1241	1251	1261	1271	1281
	1291	1301	1331	2291	2391	2441
	2451	2551	2751	2781	2791	
SIERA	2551	2741	2791			
SIERRA	0051	2471				
SILMA	0051					
SILVA	0301	2551	2791			
SILVER	2541	2551	2791			
SINGER	0051	0301	0941	2011	2191	2201
	2551	2571	2581	2611	2791	
SINUDYNE	0051	0471	0721	0941	0981	2111
	2551	2571	2581	2691	2721	2771
	2791					
SKY	2551	2791				
SMARAGD	0331					

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi					
SNYDER	0051					
SOLAVOX	0861	2551	2791			
SONIKO	2551	2791				
SONNECLAIR	2551	2791				
SONOKO	0051	0301	2551	2791		
SONOLOR	0771	0811	0991	2011	2691	2721
SONTEC	0051	2551	2791			
SONY	2531	2541	2551	2581	2691	2721
	2731	2791				
SOUND & VISION	2551	2581	2631	2791		
SOUNDESIGN	2391					
SOUNDMASTER	0301					
SOUNDWAVE	2551	2791				
SPECTRICIAN	0051	2391				
STANDARD	0301	2551	2631	2791		
STARLITE	0301	2551	2791			
STARLUX	0301					
STERN	0711	0751	0981	1161	1901	
STRATO	2551	2791				
SUNIC LINE	2551	2791				
SUNKAI	2551	2791				
SUNSTAR	0301	2551	2791			
SUNWOOD	0051	0301	2551	2791		
SUPERTEC	0301					
SUPERTECH	0301	0871	2551	2791		
SUPRA	0301	2631				
SUPREMACY	2391					
SUSUMU	2601	2611				
SUTRON	0301					
SYC LINE	0301					
SYLVANIA	0051					
SYMPHONIC	2391					
SYSLINE	2551	2791				
TANDBERG	0981	1191	2591			
TASHIKO	2321	2541	2561			
TATUNG	0051	0191	2531	2551	2791	
TEAC	2551	2771	2791			
TEAK	0301					
TEC	0301	0751	0871	0981	1721	2551
	2611	2661	2791			
TECH LINE	2551	2791				
TECHNICS	0051	0351				
TECHNILAND	0051					
TECHNISAT	1771	2551	2791			
TECHNOL	0301					
TECHISON	0301					
TEDELEX	0301	2551	2791			
TEKNANT	0051	0301				
TEKNIKA	2391					
TEKON	0301					
TELEAVIA	1991	2121	2341	2591	2601	2621
	2641	2671	2681			
TELECOR	2551	2791				
TELEFAC	0301					
TELEFUNKEN	1701	1851	1911	1951	1961	1971
	2021	2041	2091	2431	2461	2551
	2591	2601	2611	2621	2641	2551
	2681	2711	2791			
TELEFUSION	2551	2791				
TELEGAZI	2551	2791				
TELEMEISTER	2551	2791				
TELEOPTA	0301					
TELESONIC	2551	2791				
TELESTAR	0301	2551	2791			
TELETECH	0301	2551	2791			
TELETON	0751	1901	2541	2771		
TELEVIEW	2551	2791				
TELEVISIO	2011					
TELEXA	2581					
TEMPEST	0301	2551	2791			
TENNESSEE	2551	2791				
TENSAI	0051	0301	0621	1631	2551	2631
	2791					
TENSON	0301					
TESLA	0051					

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi					
TESLA ORAVA	0051					
TEVION	2551	2791				
TEXTET	2631					
THOMAS	0051	0301	2391			
THOMSON	2551	2591	2601	2611	2621	2641
	2661	2671	2681	2701	2711	2771
	2791					
THORN	0041	0051	0251	0741	0861	0921
	1081	1591	1971	2131	2171	2311
	2351	2411	2471	2551	2591	2611
	2621	2631	2691	2721	2761	2791
	2801					
THORN-FERGUSON	0051	0251	0981	1591	2021	2131
	2171	2351	2591	2611	2761	2801
	0301					
TOBO	0051	2551	2631	2791		
TOKAI	0001	0011	0021	0031	0041	1141
TOSHIBA	2541	2581	2591	2671	2751	
	2391					
TOSONIC	2391					
TOTEVISION	2391					
TOWADA	2581	2771				
TRANS CONTINENS	2551	2791				
TRANSONIC	2551	2791				
TREVI	0301					
TRIAD	0051	2551	2791			
TRILUX	0051					
TRISTAR	2801					
TRIUMPH	0051	2791				
TRIVISION	0301					
TVTEXT 95	2791					
UHER	0051	0461	1901	2551	2631	2791
ULTRAFOX	2201					
ULTRAVOX	0701	2191	2201	2551	2571	2581
	2631	2791				
UMA	0051					
UNIC LINE	2551	2771	2791			
UNIMOR	0051					
UNITED	2591	2791				
UNIVERSUM	0051	0301	1281	1411	1471	1541
	1681	1901	2441	2531	2541	2551
	2591	2681	2691	2721	2771	2781
	2791					
UNIVOX	2551	2571	2761	2791		
URANYA	0301					
VANGUARD	0301					
VECO	0301					
VESTEL	0051	0061	0071	1681	2551	2791
VEXA	0051	0301	2551	2791		
VIDEO SYSTEM	0051	2551	2791			
VIDEOTECHNIC	2631					
VIDEOTON	0631	0651	0961	1571	1791	2081
	2121					
VIDIKRON	2581					
VIDION	0301					
VIDTECH	2541					
VISION	0301	2551	2791			
VISION	0051					
VORTEC	0051	2551	2791			
VOXSON	0051	0721	2551	2571	2791	
WALTHAM	0631	0961	1071	2121	2551	2591
	2601	2671	2791			
WARDS	0051					
WATSON	0051	0301	2551	2791		
WATT RADIO	0701	1571	2581	2771		
WEGA	2221	2541	2551	2571	2791	
WEGAVOX	0051	0301	1571	2551	2791	
WELTBlick	0051	2551	2791			
WESTON	2551	2791				
WHARFEDALE	2551	2791				
WHITE WESTINGHOUSE	0051	1571	2551	2791		
WINSTON	0051	0301				
WINTERNITZ	0301					
WORLDVIEW	0051	0301				
XYPTON	2551	2791				
YAMISHI	2551	2791				

TV-Koder (TV-apparat)/TV-koodit (Televisio)

Modell/Malli	Kod/Koodi					
YOKAN	2551	2791				
YOKO	0051	0301	2201	2551	2791	
YORK	0051					
ZANUSSI	0721	1901				
ZENITH	0051					

VCR-Koder (Videobandspelare)/VCR-Koodit (Videonauhuri)

Modell/Malli	Kod/Koodi					
AIWA	0052	0132				
AKAI	0122	0192	0282	0312	0342	0352
	0462	0512	0612			
ALBA	0032	0042	0672			
AMSTRAD	0132	0152				
ANITSCH	0702					
ASA	0002					
BAIRD	0192					
BAUR	0002	0512				
BLACK DIAMOND	0622	0672				
BLAUPUNKT	0012	0162	0372	0692		
BUSH	0032	0042	0212	0672		
BUSH (UK)	0512					
CGE	0132	0462				
CRAIG	0182					
CROWN	0322					
DAEWOO	0322					
DECCA	0002	0132	0642			
DECCA (UK)	0002					
DEGRAAF	0002	0132	0232	0302		
DIXI	0142					
DUAL	0332					
DUMONT	0002	0132	0232			
DYNATECH	0132					
EMERSON	0132	0212	0222			
FERGUSON	0412	0422	0552	0602	0712	0722
	0782					
FIDELITY	0132					
FINLANDIA	0002	0232				
FINLUX	0002	0082	0132	0162	0192	0232
	0272	0302	0612			
FIRST LINE	0612					
FISHER	0182	0232	0242	0272	0292	
FORMENTI-PHOENIX	0002					
FUNAI	0132					
GEC (UK)	0002					
GENERAL TECHNIC	0872					
GOLDSTAR	0512	0652				
GOODMANS	0132	0202				
GRANADA	0002	0232	0272			
GRANADA (UK)	0002	0012	0162	0302	0512	0522
GRUNDIG	0002	0012	0452	0502	0942	0952
	0962	0972	0982	0992	1002	
	0002	0512				
HANSEATIC	0622					
HARMAN/KARDON	0112	0142	0222			
HINARI	0132	0302	0362	0512	0722	
HITACHI	0132					
IMPERIAL	0142					
INGERSOL	0002					
INNO HIT	0842	0862	0872			
INNOVATION	0002					
INTERFUNK	0192	0232	0272	0462		
ITT	0192	0232	0272	0462		
ITT-NOKIA	0442	0462	0482	0602		
JVC	0002	0512				
KARCHER	0192					
KENDO	0272					
KENWOOD	0842	0862	0872			
LIFETEC	0132					
LLOYD	0002	0012	0022			
LOEWE OPTA						

VCR-Koder (Videobandspelare)/
VCR-Koodit (Videonauhuri)

Modell/Malli	Kod/Koodi					
LOGIK	0142					
LUXOR	0132	0272	0512			
M ELECTRONIC	0132					
MAGNADYNE	0002					
MAGNASONIC	0272					
MARANTZ	0002	0012	0202			
MATSUI	0002	0142	0212	0222	0512	0672
	0902	0912	0922	0932		
MEDION	0842	0862	0872			
MEMOREX	0132	0182	0232	0272		
METZ	0012	0632				
MGA	0812					
MICROMAXX	0842	0862	0872			
MINERVA	0012					
MINOLTA	0302					
MITSUBISHI	0002	0612	0622	0672		
MTC	0132					
MULTITECH	0002	0132				
MURPHY	0132					
N.E.I.	0002					
NATIONAL	0162					
NECKERMANN	0002	0012	0222	0272	0462	0512
NOBLIKO	0012					
NOKIA	0192	0232	0272	0462	0852	
NORDMENDE	0092	0102	0332	0432	0442	0462
	0482	0492	0532	0542	0572	
OLYMPUS	0162					
OPTIONICA	0202					
ORION	0142	0212	0222	0582		
OSAKA	0132					
OSAKI	0132					
OTTO VERSAND	0002	0512				
PANENTAX	0302					
PANASONIC	0162	0372	0692	0792	0802	0882
PERDIO	0132					
PHILCO	0762					
PHILIPS	0002	0012	0022	0062	0072	0082
	0172	0202	0772			
PHONOLA	0002	0022				
PIONEER	0002	0072	0172			
PROLINE	0132					
PYE	0002	0022				
QUARTZ	0272					
QUELLE	0002	0012	0162	0222	0642	
REALISTIC	0132	0182	0202	0232	0272	
RET	0772					
REX	0442	0482				
RICOH	0652					
SABA	0092	0332	0432	0442	0462	0472
	0482	0492	0572			
SAISHO	0142	0212	0222	0672		
SALORA	0272	0512	0522	0812		
SAMSUNG	0002	0322	0352	0892		
SANYO	0182	0232	0262	0272		
SBR	0002	0022				
SCHNEIDER	0002	0132				
SEG	0002	0072				
SEI-SINUDYNE	0142					
SHARP	0202	0402				
SHINTOM	0002					
SIEMENS	0012	0272				
SINUDYNE	0002	0282	0142	0632		
SONITRON	0232	0272				
SONY	0132	0252	0382	0392	0642	0652
	0662	0822	0832			
STS	0302					
SUNKAI	0212					
SUNSTAR	0132					
SYLVANIA	0132	0612				
SYMPHONIC	0132	0612				
TANDBERG	0222	0632				
TASHIKO	0132					
TATUNG	0002	0132	0622			

VCR-Koder (Videobandspelare)/
VCR-Koodit (Videonauhuri)

Modell/Malli	Kod/Koodi					
TCM	0842	0862	0872			
TEAC	0132					
TECHNICS	0162					
TEKNIKA	0132					
TELEFUNKEN	0332	0432	0442	0462	0482	0582
	0592					
TEMPEST	0732	0742	0752			
THOMSON	0102	0332	0462			
THORN	0602					
THORN-FERGUSON	0412	0422	0442	0462	0552	0562
	0572	0602				
TMK	0222					
TOSHIBA	0322	0612				
TRIUMPH	0622					
VIDEON	0862	0872				

SAT -Koder (Satellitmottagare)/
SAT -Koodit (Satelliittivastaanotin)

Modell/Malli	Kod/Koodi					
AKAI	0263					
ALBA	0263					
AMSTRAD	0283	0573	0583	1573		
ASTRO	0663					
AUSTAR	0463	0723				
AVANDIS	1003					
BRITISH TELECOM	0263					
BSKYB	1573					
BT	0293	0633				
CAMBRIDGE	0023	0263				
CANAL+	0353	1633	1643			
CGV FREEVIEW	1653	1663	1683			
D-BOX	0153	0903				
ELTA	0273					
EURODEC	0213	0223	0233			
FERGUSON	0013					
FORCE	1093	1123				
FOXTEL	0453	0483	0743	0813	1533	
GRADIENTE	1593					
GRUNDIG	0673	0683	0693	1573		
HIRSCHMANN	0393	0403	0413	0423	0433	
HUMAX	1053					
JVC	0263					
KATHREIN	0383					
KYOSTAR	0073					
LIFESAT	0313	0333	0343			
MACAB	0933					
MEDION	0313	0333				
METRONIC	0963	0973	0983	0993	1013	1023
	1033					
MICROMAXX	0313	0333				
MULTICHOICE	0733					
NIKKO	0123	0133				
NOKIA	0143	0803	0883	0893	0913	0943
	1133	1153	1163	1523		
ONDIGITAL	0513	0853	0863	1373	1383	1523
	1553	1563				
OURALIS	1043					
PACE	0513	0563	0613	0623	0783	0793
	0803	0873	1373	1573	1593	
PANASONIC	0453	0573				
PANSAT	0063					
PHILIPS	0113	0173	0183	0193	0523	0753
	0763	0773	0803	0843	0853	0863
	1553	1563				
PROSAT	0163					
SAGES	0243	0923	1113	1393	1603	
SAMUNG	0553	1103				
SATELLITE	0533					
SECTOR	0253					

SAT -Koder (Satellitmottagare)/
SAT -Koodit (Sateliittivastaanotin)

Modell/Malli	Kod/Koodi					
SEDEA	0083					
SKY (SKY Digital)	0443	1573	1583	1593		
SKY ITALY	1673					
SKY MASTER	1343	1353	1433	1443	1473	1483
SKY SATELLITE	1363	1423	1503	1513		
SKY+ (SKY Digital +)	1543					
SONY	1573					
STRONG	0073	1173	1183	1193	1203	1213
	1223	1233	1243	1253	1263	1273
	1283	1293	1303	1313	1323	1333
SUN/MOON/STAR	0463					
TANDBERG	0103					
TELE+	0833					
TELEVES	0003	0033	0043	0053	0303	0473
	0493	0503	0543	0643	0653	0703
	0713	0823	1063	1073	1403	1413
	1453	1463	1493			
THOMSON	1143	1603				
THORN-FERGUSON	0013					
TOSHIBA	1383					
TPS	0363	1413	1603	1613	1623	
TRIAD	1143					
VORTEC	0063					
WORLDSAT	0593	0603				
XSAT	0373	0953				
ZEHNDER	0203	0323				
ZENITH	1583					
ZINWEL	1083					

CTV -Koder (Kabeltelemottagare)/
CTV-Koodit (Kaapeliteleviiovastaanotin)

Modell/Malli	Kod/Koodi			
AUSTAR	0194			
CABLETIME	0084	0094	0114	
CLYDE CABLEVISION	0064			
FILMNET	0034	0074		
FOXTEL	0154	0164	0174	
FRANCE TELECOM	0024			
GEC	0064			
G.I.	0194	0214		
HK CABLE	0204	0254		
JERROLD	0054			
MOVIE TIME	0104			
NOW BROADBAND TV	0244			
NSC	0104			
OPTUSVISION	0184			
PHILIPS	0024			
SAMSUNG	0134			
SCIENTIFIC ATLANTA	0124	0144		
SKYMASTER	0224	0234		
STARCOM	0054			
STS	0104			
TELE	0074			
TELE + 1	0074			
TELESERVICE	0044	0114		
TUDI	0014			
UNITED CABLE	0054			
ZENITH	0044			

DVD -Koder (DVD-spelare)/
DVD-Koodit (DVD-soitin)

Modell/Malli	Kod/Koodi					
3DLAB	0155					
ACOUSTIC SOLUTIONS	0545					
AEG	0505					
AIWA	0565	0545				
AKAI	0035	0435	0505			
ALBA	0515	0525	0585			
AMSTRAD	0585					
ANSONIC	0355					
APEX DIGITAL	0405					
AWA	0375					
A-TREND	0555					
BLACK DIAMOND	0585					
BLUE SKY	0405	0455	0525	0585		
BOMAN	0395					
BRANDT	0685					
BUSH	0355	0425	0515	0525	0585	0635
CAMBRIDGE AUDIO	0495					
CENTRUM	0585					
cinéULTRA	0525					
CGV	0325	0415	0695	0705	0715	
CLASSIC	0545					
CLATRONIC	0505					
CONIA	0405					
CROWN	0345	0685				
CYBERCOM	0355					
CYBER HOME	0265	0555				
CYTRON	0365	0685				
DAEWOO	0345	0365				
DANSAI	0345	0395				
DECCA	0345					
DENON	0025					
DENVER	0505	0525				
DENZEL	0385					
DIAMOND	0535	0685				
digitRED	0515					
Digitrex	0405					
DiK	0355					
DiViDo	0365					
DMTECH	0395					
DUAL	0385	0395	0545	0585	0685	
ELTA	0425					
EMERSON	0365					
ENZER	0385					
FERGUSON	0685					
FINLUX	0345	0395	0575			
GE	0515					
GLOBAL SPHERE	0535					
GOLDSTAR	0125					
GOODMANS	0395	0425	0435	0685		
GO VIDEO	0395					
GRÄTZ	0385					
GRUNDIG	0155	0365	0435	0455	0585	0685
GRUNKEL	0345					
HANSEATIC	0575					
HARMAN KARDON	0205					
HDT	0365					
HITACHI	0095	0195	0225	0275	0385	
HITEKER	0405					
HYUNDAI	0395					
ISP	0455					
JAMO	0595	0605				
JMB	0455					
JOCEL	0615					
JVC	0015	0135	0145	0155	0485	
KARCHER	0395					
KENDO	0525					
KENWOOD	0025	0085				
KISS	0385					
LASONIC	0115					
LAWSON	0365					
LECSOON	0625					
LENCO	0345	0355	0525	0685		
LENOXX	0425					

DVD -Koder (DVD-spelare)/
DVD-Koodit (DVD-soitin)

Modell/Malli	Kod/Koodi			
LEXIA	0525			
LG	0125	0575		
LIMIT	0535			
LINN	0245			
LOEWE	0155	0255		
LOGIC LAB	0535			
LOGIX	0365	0395		
LUMATRON	0365			
LUXMAN	0095			
MAGNAVOX	0015	0055	0445	0485
MANHATTAN	0365			
MARANTZ	0155			
MATSUI	0455	0685		
MBO	0425			
MEDION	0355	0395	0685	
METZ	0185	0585	0665	
MICROMEDIA	0015	0155	0485	
MICROMEGA	0155			
MICROSOFT	0655			
MICROSTAR	0355			
MINAX	0585			
MITSUBISHI	0005	0585		
MONYKA	0385			
MUSTEK	0545			
Mx ONDA	0685			
NAD	0215	0575		
NAIKO	0345			
NEUFUNK	0385			
NORDMENDE	0355			
ONKYO	0015	0055	0105	0485
OPTIMUS	0175	0185	0665	
ORION	0455			
ORITRON	0685			
PACIFIC	0305	0335	0355	0435 0535
PALLADIUM	0455			
PALSONIC	0405	0635		
PANASONIC	0025			
PHILIPS	0015	0055	0155	0255 0485
PHONOTREND	0525			
PIONEER	0175	0185	0665	
PROLINE	0615	0685		
PROSCAN	0655			
PROSONIC	0525			
PROVISION	0525			
RADIONETTE	0575			
RAITE	0385			
RCA	0655			
REC	0025	0635		
RED STAR	0345	0505		
REOC	0535			
REVOY	0525			
ROADSTAR	0425	0525	0635	
ROTEL	0145			
SABA	0685			
SALORA	0575			
SANSUI	0455	0505		
SAMSUNG	0095	0225		
SCAN	0365			
SCHAUB LORENZ	0505			
SCHNEIDER	0365	0395	0435	0685
SCIENTIFIC LABS	0535			
SCOTT	0405	0685		
SEG	0385	0535	0585	
SHARP	0645			
SHANGHAI	0405			
SHERWOOD	0575			
SHINCO	0515			
SHINSONIC	0075			
SILVA	0505			
SILVASCHNEIDER	0355			
SINGER	0425			
SKYMASTER	0545			
SLIM ART	0345			

DVD -Koder (DVD-spelare)/
DVD-Koodit (DVD-soitin)

Modell/Malli	Kod/Koodi				
SM ELECTRONICS	0425	0535	0545		
SONY	0045	0095	0235	0285	0675
SONY-PS2	0165				
SOUNDMASTER	0535				
SOUNDWAVE	0395				
STANDARD	0535	0685			
SUNWOOD	0505				
SVA	0405				
TATUNG	0345				
TEAC	0185	0435	0515	0535	0575
TECHNICS	0025				
TECHNIKA	0345				
TECHWOOD	0585				
TENSAI	0425	0685			
TEVION	0685				
THETA DIGITAL	0185				
THOMSON	0015	0135	0655		
TOKAI	0385	0505			
TOKIWA	0365				
TOSHIBA	0015	0055	0465	0475	0485
UNITED	0505				
UNIVERSUM	0125	0575	0585		
VENTURER	0435				
VIETA	0365				
VOXSON	0355	0545			
WALKVISION	0515				
WESDER	0525				
WHARFEDALE	0615	0625			
XMS	0505	0635			
X-BOX	0295				
YAMAHA	0025	0065	0155		
YAMAKAWA	0385				
YUKAI	0545				
ZENITH	0015	0055	0125	0485	0575