

PS3 WIRELESS INDUCTION GAME PAD INSTRUCTION MANUAL

MODE: LBP-024

I. PRODUCT BRIEF

This product is a high frequency wireless control game pad, specifically for use with PS3 and PC consoles. It has working frequency of 2.4GHz. Additionally, it features 3-dimensional movement induction functions..

II. PACKAGE CONTENTS

- a. Game pad
- b. Instruction manual
- c. Receiver

III. PRODUCT FEATURE

- a. Two "AAA" alkaline batteries are capable of continuous use for more than 12 hours.
- b. Supports multi-loop signal, for simultaneous control without mutual interference.
- c. Operation distance can be up to a maximum of 10M.
- d. Induction function in six directions lets you control direction freely during play.
- e. Check code function between handle and receiver.

IV. OPERATION INSTRUCTION

Check signal code

1. The connection instructions on PS3 console:
 - a. Turn on the PS3 console and plug the receiver into the USB port of the console. The "RX" LED and 4 LEDs signal indicator on the receiver will flash.
 - b. Turn on the power switch of the game pad, the "RX" LED on the game pad will flash.
 - c. Press the "CONNECT" button of the receiver, the "RX" LED on the receiver is flashing faster.
 - d. Press the "SELECT + L3" buttons at the same time on the game pad for 3 seconds, the "RX" LED on the game pad keeps flashing and the "RX" LED on the receiver stops flashing and keeps lighting on..
 - e. Then press "PS" button on the game pad, "RX" LED on the game pad and one of 4 LEDs signal indicator on the receiver stop flashing and keep lighting on, which indicates connection is OK.
2. The connection instructions on PC console:
 - a. Turn on the PC console and plug the receiver into the USB port of the console. The "RX" LED on the receiver will flash.
 - b. Turn on the power switch of the game pad, the "RX" LED on the game pad will flash.
 - c. Press the "CONNECT" button of the receiver, the "RX" LED on the receiver is flashing faster.
 - d. Press the "SELECT + L3" buttons at the same time on the game pad for 3 seconds, the "RX" LED on the receiver stops flashing and keeps lighting on and the "RX" LED on the game pad is extinguished, which indicates connection is OK.

As for the above L3, to press L3 means to press the LEFT ANALOG AXIS button down straight. After the code check, the signals of your receiver and game pad may not connect with the signals of other receivers and game pads. You may have to check the code again if you want to connect with other receivers and game pads.

3. Power Control:

The power for the game pad is controlled by an "ON" / "OFF" switch located on the bottom of the pad adjacent to the battery compartment.

4. Movement Induction function to six direction control:

This function can control direction or angle of view, only if the game supports the six direction induction function. .

5. PS3 console operation introduction:

Press the PS key before starting the game. Then select "Assign Controller Ports" in the function menu→ Press "O" key, to pop up the port selection menu →select the number of signal channel by using up and down keys of 4-way cross key →then press "O" key again and the corresponding LED will light, indicating the selection is OK→ finally press "X" key to start the game.

6. PC console operation instructions:

 
 
 
 
- a. Open control panel of PC console, then double-click" Game Controller" icon→on the test menu click the "property" button.
- b. Test keys on the game pad one by one, the corresponding key functions will indicate on the test menu →Click the "OK" button to finish the test, and then click the "OK" button on game control menu to end the test.

V. CAUTION

- a. Don't use this product with other electrical products with same frequency, to avoid mutual interference.
- b. Don't allow liquid or metal filings to enter the product.
- c. Don't drop or mishandle this product; or place heavy objects on it.
- d. Don't use or store this product in high temperatures or a damp environment.
- e. Don't mix different battery brands or use old and new batteries together.
- f. Remove the batteries when the voltage is too low or the product isn't used for a long time, to avoid damage from leakage.
- g. Don't dismantle this product without authorization; The game pad will automatically enter into sleep mode after 10 minutes of non-use. To exit sleep mode, press the "PS" key.
- h. If the signal connection fails, switch the device off and then on to re-establish the signal
- I. Refrain from operating any of the function keys before the device is switched on.
- J. Remember to press the "PS" key when Connecting the game pad to a PS3 console.
- k. The game pad cannot connect to the receiver until the Code Checking is completed successfully.

PS3 WIRELESS INDUCTION GAME PAD

MODE:LBP-024

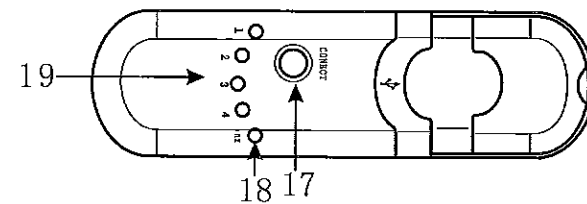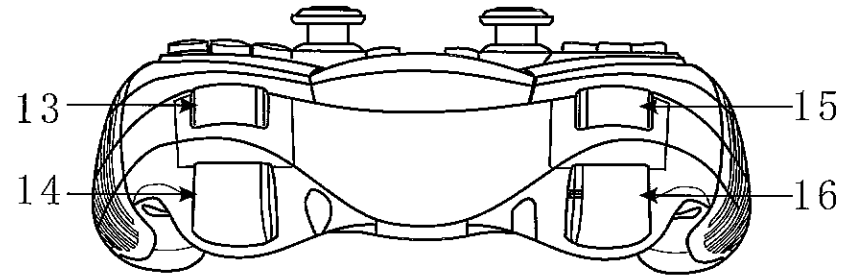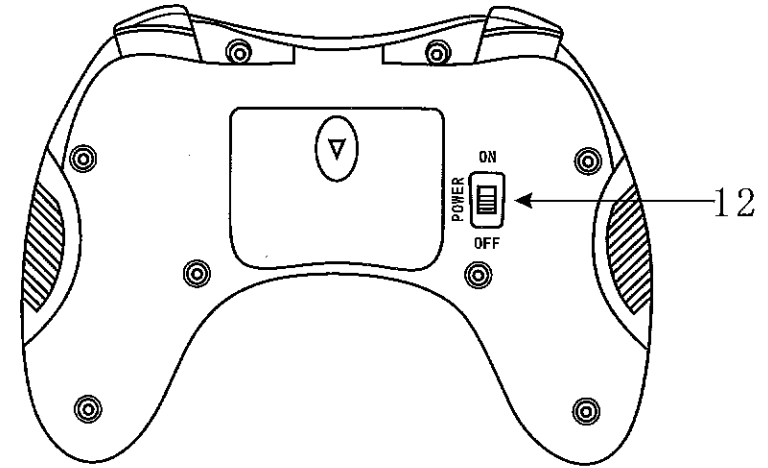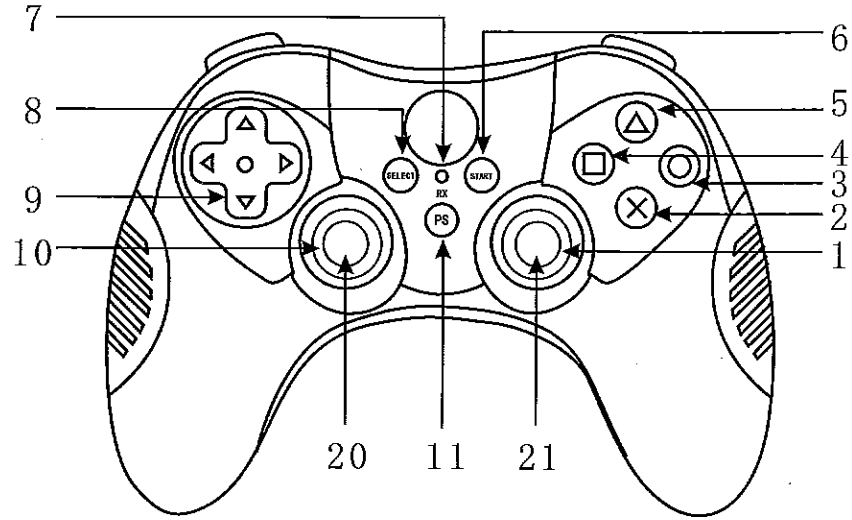

- | | |
|-----------------------|-----------------------------|
| 1. RIGHT ANALOG AXIS | 11. PS BUTTON |
| 2. X BUTTON | 12. POWER ON/OFF |
| 3. O BUTTON | 13. R1 BUTTON |
| 4. □ BUTTON | 14. R2 BUTTON |
| 5. △ BUTTON | 15. L1 BUTTON |
| 6. START BUTTON | 16. L2 BUTTON |
| 7. RX LED | 17. CONNECT BUTTON |
| 8. SELECT BUTTON | 18. RX LED |
| 9. DIRECTIONAL BUTTON | 19. 4 LEDs signal indicator |
| 10. LEFT ANALOG AXIS | 20. L3 |
| | 21. R3 |