

Pop-up Tent

Art.no 31-5773


Folding the tent

Vik ihop tältet

Brett teltet sammen

Teltan pakkaaminen

Das Zelt zusammenfallen

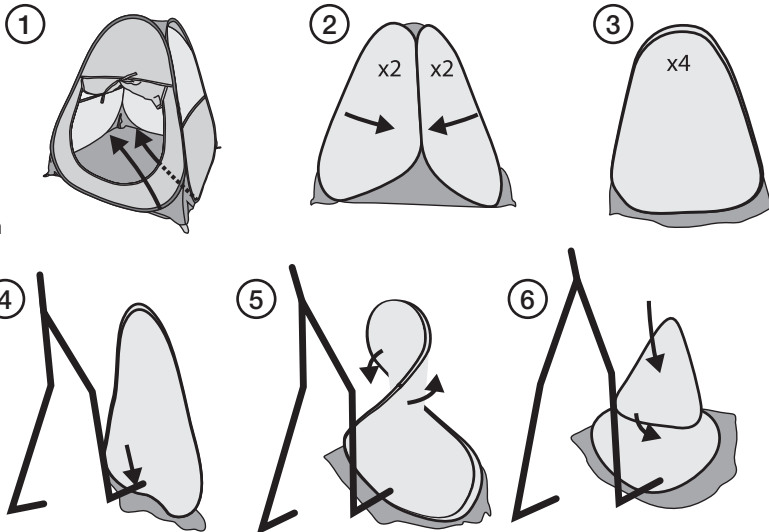

UNITED KINGDOM • customer service tel 020 8247 9300 e-mail customerservice@clasohlson.co.uk
internet www.clasohlson.co.uk postal 10 – 13 Market Place, Kingston upon Thames, Surrey, KT1 1JZ
SVERIGE • kundtjänst tel. 0247/445 00 fax 0247/445 09 e-post kundservice@clasohlson.se
internet www.clasohlson.se brev Clas Ohlson AB, 793 85 INSJÖN
NORGE • kundesenter tel. 23 21 40 00 fax 23 21 40 80 e-post kundesenter@clasohlson.no
internett www.clasohlson.no post Clas Ohlson AS, Postboks 485 Sentrum, 0105 OSLO
SUOMI • asiakaspalvelu puh. 020 111 2222 sähköposti asiakaspalvelu@clasohlson.fi
kotisivu www.clasohlson.fi osoite Clas Ohlson Oy, Kaivokatu 10 B, 00100 HELSINKI
DEUTSCHLAND • Kundenservice Hotline: 040 2999 78111 E-Mail kundenservice@clasohlson.de
Homepage www.clasohlson.de Postanschrift Clas Ohlson GmbH, Jungfernstieg 38, 20354 Hamburg

**clas
ohlson**