

STOCKHOLM

INSTRUCTIONS

TOUCH CONTROLS

Via the logo button 

TURN ON

Remove earphones from the charging case OR Touch the (L) and (R) logo for 2 seconds. The indicator light will flash blue three times.

TURN OFF

Place earphones in the charging case OR Touch either the right (R) or left (L) logo for 5 seconds. The indicator light will flash blue three times.

TURN ON VOICE ASSISTANT

Touch the logo twice (R).

TURN OFF VOICE ASSISTANT

Touch the (L) or (R) logo once.

ANSWER A CALL

Touch the logo twice on the right (R) or left (L) earphone.

END A CALL

Touch the logo twice on the right (R) or left (L) earphone.

REJECT A CALL

Touch and hold the logo on the right (R) or left (L) earphone for 2 seconds.

PLAY MUSIC

Touch the logo twice on the left (L) earphone.

PAUSE MUSIC

Touch the logo twice on the left (L) earphone.

ADJUST THE VOLUME (+)

Touch the logo once on the right (R) earphone.

ADJUST THE VOLUME (-)

Touch the logo once on the left (L) earphone.

SKIP A TRACK FORWARD

Touch the logo on the right (R) earphone for 2 seconds.

SKIP A TRACK BACKWARD

Touch the logo on the left (L) earphone for 2 seconds.

urbanista

STOCKHOLM

INSTRUCTIONS

PAIRING

1.



Put the earphones in the charging case and remove them again.

2.



Hold the earphones close to each other. The earphones will connect automatically.

3.



Open Bluetooth settings and connect to "Urbanista Stockholm".

RESET EARPHONES

1.



Put the earphones in the charging case

2.



Hold right (R) and left (L) logo simultaneously for 10 seconds

urbanista