




1 BATTERY

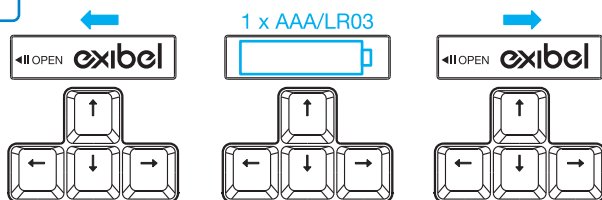


2 CONNECT

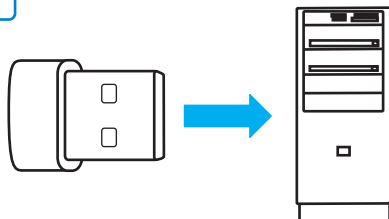

3 ON OFF

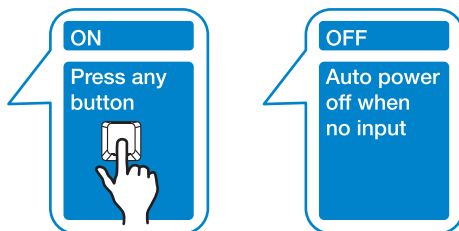

4 LOW BATTERY

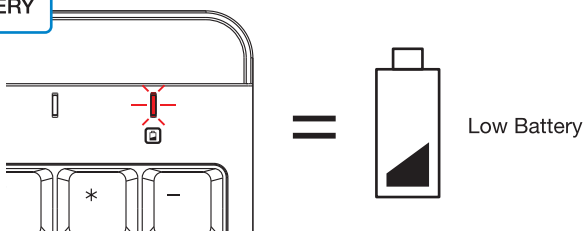

exibel[®]

Wireless Keyboard
38-8940

www.clasohlson.uk
www.clasohlson.se
www.clasohlson.no
www.clasohlson.fi
www.clasohlson.de